


MODEL XL-UH1H MICRO COMPONENT SYSTEM


OPERATION MANUAL

XL-UH1H Micro Component System consisting of XL-UH1H (main unit) and CP-UH1H (speaker system).

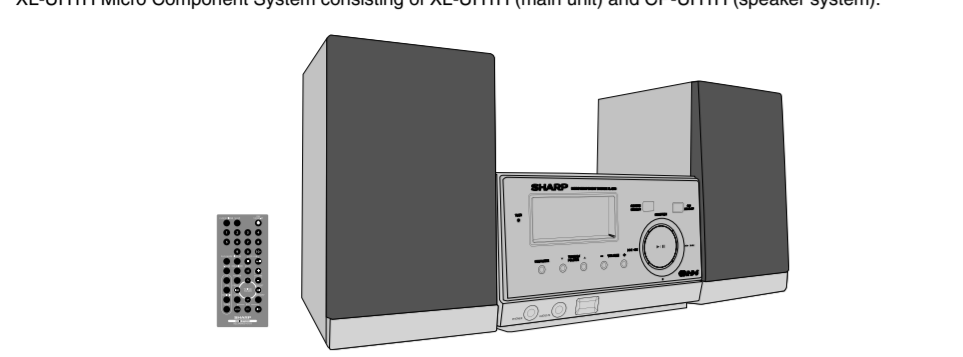

Accessory

Please confirm that only the following accessory is included.

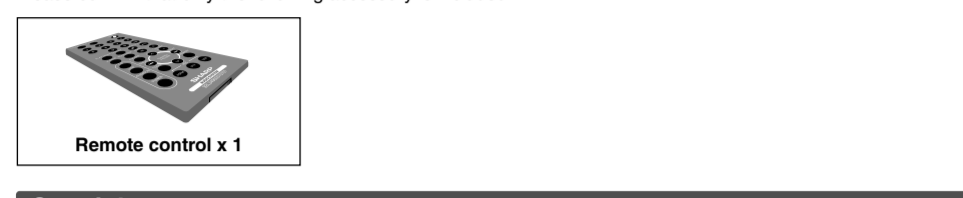

Special note

Supply of the product does not convey a license nor imply any right to distribute content created with this product in revenue-generating broadcast systems...



Special notes


- WARNINGS: When the ON/STAND-BY button is set at STAND-BY position, mains voltage is still present inside the unit. This unit contains no user serviceable parts. Do not use the unit for a long period. To prevent fire or shock hazard, do not expose this appliance to dripping or splashing. Do not place any liquids, such as water, on the unit.

Volume control

The sound level at a given volume setting depends on speaker efficiency, location and various other factors. It is advisable to avoid exposure to high volume levels. Do not turn the volume on to full at switch on and listen to music at moderate levels.

System connections

- Precautions: Please ensure that the equipment is positioned in a well-ventilated area and ensure that there is at least 10 cm (4") of free space along the sides, top and back of the equipment. Use the unit on a firm, level surface free from vibration. Place the speakers at least 30 cm (12") away from any CRT TV to avoid colour variations across the TV screen.

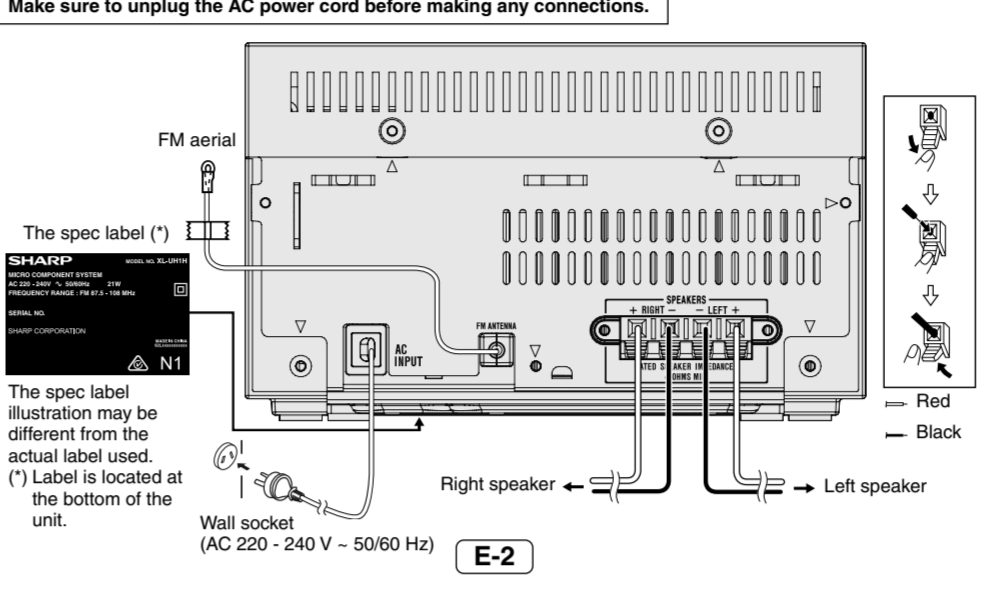

Remote control - battery installation

- Precautions for battery use: Remove the battery if the unit will not be used for long periods of time. Do not use rechargeable battery (nickel-cadmium battery, etc.). Danger of explosion if battery is incorrectly replaced.

General control

- Volume auto set-in: If you turn off and on the main unit with volume set to 16 or higher, the volume will set at 16. Extra bass control (X-BASS): When the X-BASS button is pressed, the unit will enter the extra bass mode which emphasises the bass frequencies.

General control (continued)

- Function (on main unit only): When the FUNCTION button on main unit is pressed, the current function will change to different mode. Press the FUNCTION button repeatedly to select desired function. Equalizer: When the EQUALIZER button is pressed, the current mode setting will be displayed. To change to a different mode, press the EQUALIZER button repeatedly until the desired sound mode appears.

Listening to a CD or MP3/WMA disc

- Disc playback: Press the ON/STAND-BY button to turn the power on. Press the CD button on the remote control or FUNCTION button on the main unit repeatedly to select CD function. Open the disc compartment. Place the disc on the disc tray, label side up. Close the disc compartment.

Listening to a CD or MP3/WMA disc (continued)

- Direct track search: By using the Direct Search buttons, the desired tracks on the current disc can be played. Random play: The tracks on the disc can be played in random order automatically. To random play all tracks: Press and hold down PLAY MODE button on the remote control to select the desired track whilst playing the selected disc.

Listening to a CD or MP3/WMA disc (continued)

- Procedure to play back MP3/WMA disc with folder mode: To play back CD-R/RW. After disc is loaded, disc info will be displayed. Press the FOLDER button and press the FOLDER (v or ^) button to select desired playback folder. (Folder mode on) Select desired file to be played back by pressing the << or >> button.

Listening to USB mass storage device/MP3 player

- To play back USB/MP3 player with folder mode on: Press the USB button on the remote control or FUNCTION button on main unit repeatedly to select USB function. Connect the USB memory device that has MP3/WMA format files on the unit. When the USB memory is connected to the main unit, the device information will be displayed.

Listening to USB mass storage device/MP3 player (continued)

- Various disc functions: Pause, Track up/down, Fast forward/reverse. Manual tuning: Press the TUNING (v or ^) button repeatedly to tune in to the desired station. Auto tuning: When the TUNING (v or ^) button is pressed for more than 0.5 seconds, scanning will start automatically.

Using the Radio Data System (RDS) (continued)

- Information provided by RDS: Station name (PS), Programme type (PTY), Radio text (RT), and Traffic Announcement (TA). To recall a preset station: Press the PRESET (v or ^) button for less than 0.5 seconds to select the desired station.

Using the Radio Data System (RDS) (continued)

- Using the Auto Station Programme Memory (ASP/M): When the ASPM programme is selected, the tuner will automatically search for new RDS stations. To recall stations in memory: Press the TUNER button on the remote control or FUNCTION button on the main unit repeatedly to select TUNER function.

Setting the clock (Remote control only)

- Timer playback: The unit runs and plays the desired source (CD, USB, TUNER or AUDIO IN) at a preset time. To set the timer: Press the ON/STAND-BY button to turn to standby mode. Press the CLOCK/TIMER button until '00:00' appears.

Timer and sleep operation (Remote control only) (continued)

- Adjust the volume using the VOLUME +/- or VOLUME MUTE buttons. Press the ON/STAND-BY button to enter the power stand-by mode. The TIMER red indicator lights up and the unit is ready for timer playback. When the preset time is reached, playback will start. The volume will increase gradually until it reaches the preset volume. The 'O' indicator will blink during timer playback. The 'DALY' indicator will blink during timer playback.

Enhancing your system

- To use timer and sleep operation together: Set the sleep timer (refer to the column on the left, steps 1-5). What the sleep timer is set, set the timer playback (steps 2-5, pages 10-11). Listening to the playback sounds of portable audio player, etc.: Use a connection lead to connect the portable audio player to the AUDIO IN socket.

Troubleshooting chart (continued)

- USB: If the device cannot be detected, check if the device is properly connected. If playback does not start, check if the device is properly connected. Factory reset, clearing all memory: Press the ON/STAND-BY button to enter the power stand-by mode. Press down the VOLUME + button and the button on main unit until 'CLR ALL' appears.

Specifications

- General: Power source: AC 220 ~ 240 V - 50/60 Hz. Power consumption: Power on: 21 W. Power stand-by: 0.4 W. Dimensions: Width: 190 mm (7.12"). Height: 115 mm (4.51"). Depth: 200 mm (7.87"). Weight: 2.4 kg (5.3 lbs.).

Timer and sleep operation (Remote control only) (continued)

- Cancel the timer setting: Press the CLOCK/TIMER button until 'ONCE' or 'DAILY' appears, then press MEMORY button. The unit display 'OFF'. To cancel the sleep operation: Press the ON/STAND-BY button until 'SLEEP' is indicated. To cancel the sleep operation without setting the unit to the stand-by mode, proceed as follows.

Troubleshooting chart (continued)

- Condensation: Sudden temperature changes, storage or operation in an extremely humid environment may cause condensation inside the cabinet (CD pickup, etc.) or on the transmitter on the remote control. CD player: If playback does not start, check if the disc is properly inserted. Remote control: If the remote control does not operate, check if the battery polarity is correct.

Troubleshooting chart (continued)

- Problem occurs: When this product is subjected to strong external interference (mechanical shock, excessive static electricity, abnormal supply voltage due to lightning, etc.) or it is operated incorrectly, it may malfunction. Maintenance: Periodically wipe the cabinet with a soft cloth and a diluted soap solution, then with a dry cloth.

Specifications

- Support file: MP3, AAC, WMA, etc. File system support: Microsoft Windows/DOS/FAT 32. Tuner: Frequency range: FM 87.5 - 108 MHz. Speaker: Type: 1-way full range system. Maximum input power: 10 W.

**SHARP**  
 FOR LOCATION ENQUIRIES WITHIN  
**AUSTRALIA**  
 REGARDING YOUR LOCAL  
 SHARP APPROVED SERVICE CENTRE  
 VISIT OUR WEBSITE AT  
**www.sharp.net.au**  
 OR CALL SHARP CUSTOMER CARE  
**1300 135 022**  
 (LOCAL CALL COSTS APPLY WITHIN AUSTRALIA)  
 SHARP CORPORATION OF AUSTRALIA PTY LTD

**SHARP**  
 FOR LOCATION ENQUIRIES WITHIN  
**NEW ZEALAND**  
 REGARDING YOUR LOCAL  
 SHARP APPROVED SERVICE CENTRE  
 VISIT OUR WEBSITE AT  
**www.sharp.net.nz**  
 CONTACT YOUR SELLING DEALER/RETAILER  
 OR CALL  
**SHARP CUSTOMER SERVICES**  
 TELEPHONE: 09 573 0111  
 FACSIMILE: 09 573 0113  
 SHARP CORPORATION OF NEW ZEALAND LIMITED

SP6m019(JUNE 2004)

E-16

**SHARP**  
**WARRANTY**  
*Consumer Electronic Products*  
**Congratulations on Your Purchase!**

This Sharp product is warranted against faults in materials and manufacture for a period of twelve(12) months from the date of original purchase.

If service is required during the warranty period, please contact your nearest Sharp Approved Service Centre. These repairs would be carried out at no charge to the owner, subject to the conditions specified herein.

The owner is responsible for any transportation and insurance costs if the product has to be returned for repair.

This warranty does not extend to accessories or defects or injuries caused by or resulting from causes not attributable to faulty parts or the manufacture of the product, including but not limited to, defect or injury caused by or resulting from misuse, abuse, neglect, accidental damage, improper voltage, liquid spillage, liquid ingestion, infestation, software, or any alterations made to the product which are not authorised by Sharp.

Please retain your sales documentation, as this should be produced to validate a warranty claim.

This warranty is in addition to and in no way limits, varies or excludes any express and implied rights and remedies under any relevant legislation in the country of sale.

**IMPORTANT**  
**DO NOT RETURN THIS DOCUMENT TO SHARP**

For your reference, please enter the particulars of your purchase below and retain with your purchase documentation.

Model No. \_\_\_\_\_ Date of Purchase \_\_\_\_\_  
 Serial No. \_\_\_\_\_ Retailer \_\_\_\_\_

**SHARP**  
 SHARP CORPORATION OF AUSTRALIA PTY LTD  
 SHARP CORPORATION OF NEW ZEALAND LIMITED

**IMPORTANT NOTICE:** This warranty applies only to products sold in Australia & New Zealand

E-17